

How to use BARE BONES® SC STRIPPER SUPER CONCENTRATE



22 Bare Bones SC Removador Super Concentrado

READY-TO-USE LABEL (Diluted 1:20)

WARNING: CAUSES SERIOUS EYE IRRITATION. CAUSES SKIN IRRITATION. MAY BE HARMFUL IF SWALLOWED. IN CONTACT WITH SKIN OR IF INHALED. MAY CAUSE RESPIRATORY IRRITATION. KEEP OUT OF REACH OF CHILDREN.

Precautionary statement:
Prevention: Do not breathe mist or vapor. Use only in well-ventilated areas. Wear protective gloves/eye protection. Do not eat, drink or smoke when using this product. Wash thoroughly after handling. Keep out of reach of children.

Response: If swallowed: Rinse mouth. Do NOT induce vomiting. If on skin (or hair): Take off immediately all contaminated clothing. Rinse skin with water/shower. Wash contaminated clothing before reuse. If inhaled: Remove person to fresh air and keep comfortable for breathing. Immediately call a poison center/doctor. If in eyes: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

Storage: Store locked up. Store in a well-ventilated place. Keep out.

Disposal: Dispose of contents/container in accordance with local/regional/national/international regulations. This product is a "Hazardous Chemical" as defined by the OSHA Hazard Communication Standard, 29 CFR 1910.1200. All components are on the U.S. EPA TSCA Inventory List.

Additional safety measures:
Read the entire label and SDS before using this product, and for additional first aid measures. SDS for this product is available on the web at www.nclonline.com

NCL World Class Cleaning & Hygiene Solutions®

Philadelphia, PA 19123
1-800-NAT-CHEM • (215) 922-1200
E-mail: info@nclonline.com • Web Site: www.nclonline.com

DUAL-BLEND EQUIPMENT DIRECTIONS:

Chemical Selector Dial

1. Turn the chemical selector dial to the desired chemical position, indicated by the directional arrow
2. Dispense chemical by either activating the bottle fill lever or bucket fill button.
3. For rinse water, point the dial straight down at the water symbol. This is not potable water, do not drink

Bottle Fill

1. Slide the bottle tube inside a the spray bottle and raise the bottle to engage the u-shaped lever of the bottle fill assembly
2. To stop filling, lower the bottle and the lever will disengage
3. Be careful when removing the spray bottle so as to not splash residual chemical

Bucket Fill

1. To start the flow of diluted chemical, press button on unit above selector dial
2. For continuous flow, twist button clockwise
3. To disengage, release button or twist button counterclockwise

NOTE: The DUAL-BLEND® bottle is designed for use with the DUAL-BLEND® Wall Dispenser and the DUAL-BLEND® Portable Dispensing Unit. Dilution tips built into the product containers provide precise, accurate dilution for every product, every time, regardless of dispensing equipment chosen.


DIRECTIONS FOR USE:

Fill BARE BONES® SC solution from the DUAL-BLEND® Dispensing Unit at a dilution rate of 1:20 (5 oz. per gallon) into a mop bucket or automatic scrubber. Use cold tap water only. Apply liberally to an area small enough so as not to allow the product to dry and allow to stand for 3 to 5 minutes. Scrub with a rotary floor machine or automatic scrubber equipped with stripping pads. Remove solution and old liquefied finish with a wet vacuum or automatic scrubber. Allow floor to dry thoroughly and apply recommended NCL Floor Finish as per instructions. **NOTE:** Asphalt tile, Linoleum and other sensitive floor surfaces may be damaged by contact with stripping solution. We recommend that a spot test be conducted before general use.



DISPOSE OF UNUSED PRODUCT IN ACCORDANCE WITH LOCAL, STATE AND FEDERAL REGULATIONS - PLEASE RECYCLE CONTAINER

PPE INFORMATION: Respiratory protection is generally not required. No special ventilation is normally required. The use of safety glasses and gloves is recommended. No other protective equipment is required.

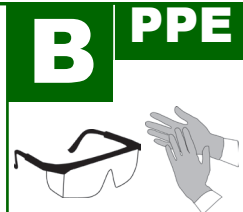

NCL World Class Cleaning & Hygiene Solutions®

Philadelphia, PA 19123 • 1-800-NAT-CHEM • (215) 922-1200
E-mail: info@nclonline.com • Web Site: www.nclonline.com

5092WC-E-0324